


**DUCATI '08- PRESENT 848, 07'-09' 1098 & '09-'11 1198
DIY RUBBER TRANSFER**

Thank you for purchasing a Zero Gravity saddle. This instruction will give you an in-depth look at the rubber stop transferring process. Please read below. To receive further assistance please go to www.zerogravity-racing.com/seats.php and click onto installation.

Warning: To insure proper location remove and install one at a time in the same location installed on your OEM seat.

Helpful hints: Use metric tools, clean hands, put the bike on a stand. To avoid rubber damage and to make the removal and install much easier apply aerosol lubricant such as WD-40 to rubber stops surface facing the seat.

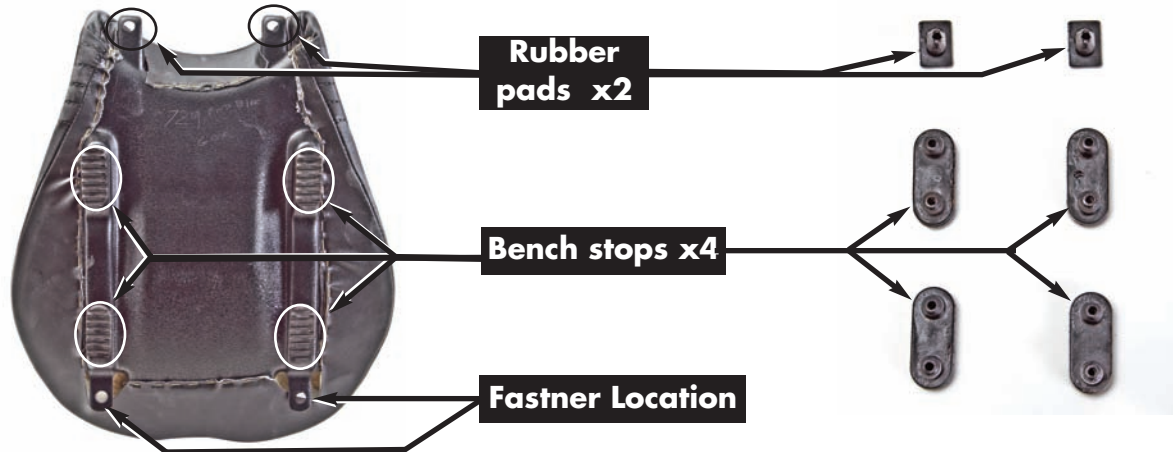

Mounting Your Zero Gravity Saddle

1. Remove the original saddle and save the factory seat screws and rubber stops from your OEM seat.
2. Install all OEM rubber stops onto your Zero Gravity® saddle as shown above in the same way they were installed on your OEM seat. The front rubber pads is hooked in first before bolting the seat down.
3. Position your Zero Gravity® saddle onto your bike chassis and push into place as you would the OEM seat. Install the original seat screw once the saddle is properly aligned.

